



2811

Demolition Hammer 1800W

Number	Name
1	Front cover
2	Retaining ring
3	Washer
4	Ball retainer
5	Ball retaining spring
6	Connecting set
7	Inner hex screw
8	Spring washer
9	Iron cover
10	O-ring
11	Steel column
12	Turning set
13	O-ring
14	Retaining ring
15	Oil seal
16	Gearbox guide
17	Vice hammer
18	Shock absorption ring
19	Sliding seat
20	Connecting componet
21	O-ring
22	O-ring
23	Oil seal cover
24	O-ring
25	Felt ring
26	Inner hex screw
27	Spring washer
28	Tank cover
29	O-ring
30	Shaft gear
31	Plane bearing gaskets
32	Needle bearing
33	Gear case
34	Support plate
35	O-ring
36	Flat washer
37	Spring washer
38	Inner hex screw
39	Front placket
40	Connecting rode cover
41	Needle bearing
42	Connecting pole
43	Piston
44	O-ring
45	Piston shaw
46	Cylinder

Number	Name
47	Cylinder spring
48	Control sleeve
49	Ram
50	Oil seal
51	O-ring
52	Bearing
53	Armature
54	Cage ring
55	Bearing
56	Bearing cover
57	Wind guide ring
58	Screw
59	Stator
60	Copper spring
61	Screw
62	Back cover
63	Wire mesh
64	Inner hex screw
65	Screw
66	Holder cover (with brush holder)
67	Carbon brush
68	Brush holder
69	Housing
70	Switch
71	Speed controller
72	Cord flange
73	Cord
74	Cord protector
75	Handle and rubber
76	Inner hex screw
77	Spring washer
78	Flat washer
79	Flat washer
80	Screw
81	Switch trigger
82	Cushion
F1	Hex screw
F2	Side handle
F3	Side handle button
F4	Hex nut
F5	Side handle button cover
F6	Side handle dividing block
F7	Clamp
F8	Hoop

2811

Demolition Hammer 1800W