


Ronix®

Premium Quality

LED WORK LIGHT 32W RH-4216

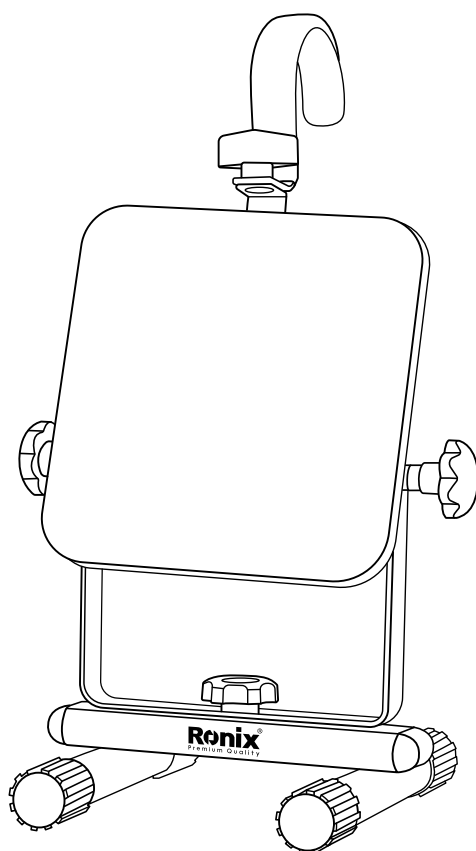


www.ronix.ir



TECHNICAL SPECIFICATION

Model	RH-4216
Max Power	32W
Voltage	220-240V
Frequency	50-60Hz
Light Type	SMD2835
Lighting Mode	100%-off
Emitting Color	Cold white
Beam Angle	120°
Body Material	PC+AL+Q197
Max Flux	3000LM
Illumination Range	40m
CCT	6500K
Dimension	16x14.5x30cm
Weight	0.95Kg

PART LIST

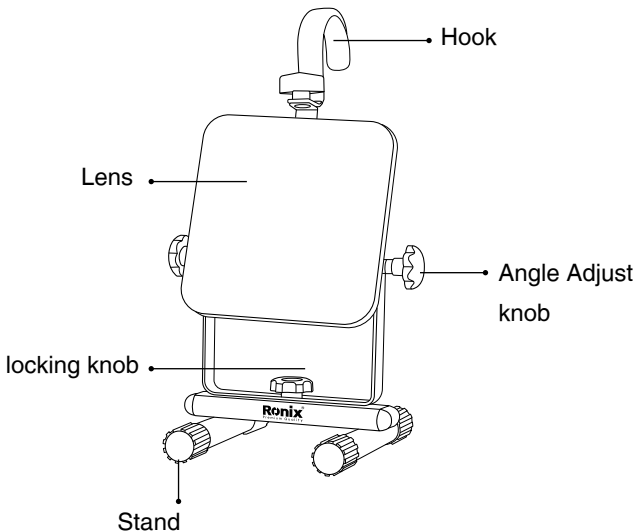

IMPORTANT SAFETY INSTRUCTIONS

READ AND UNDERSTAND ALL WARNINGS, CAUTIONS AND OPERATING INSTRUCTIONS BEFORE USING THIS EQUIPMENT. Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

CAUTION:

RISK OF ELECTRIC SHOCK, do not use with extension cord near water or where water may accumulate. Keep work light at least 16 feet from pools and spas. Keep plugs and receptacles dry. Use only three wire outdoor extension cords with grounded plugs and grounded receptacles.

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PERSONAL INJURY

- Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for wet location work light. Receptacles are available having the built-in GFCI protection and are able to be used for this measure of safety.
- Use only with an extension cord for outdoor use.
- Do not look directly at the lighted lamps to avoid eye injuries.
- Always keep the work light away from any flammable surface or materials.
- Always check damaged or worn-out parts before using the work light. Broken parts will affect the work light operation. Replace or repair damaged or worn parts immediately. If repairs are needed, consult a professional electrician.
- Do not use a pressure washer to clean this product.
- Do not modify the work light in any way. Unauthorized modification may impair the function and/or safety and could affect the life of the product. There are specific applications for which the work light was designed.

- Store work light in a secure place out of the reach of children. Inspect it for good working condition prior to storage and before re-use.

Safety warning for work-Light


This is not a toy; children should not permit to use it. This is a DIY product, all electronic parts fixed already, any intention of opening work-light or changing work-light design is prohibitive unless a professional electrician. Do not attempt to replace or change or the diode lights! If the protective glass is cracked or broken, it must be replaced before the light can be used again.

DESCRIPTION OF SYMBOLS

	Conforms to relevant safety standards.
	To reduce the risk of injury, user must read instruction manual.
	Do not dispose of old appliances with domestic rubbish.

OPERATION

ATTACHING WORK LIGHT HEAD TO STAND (Fig. 2)

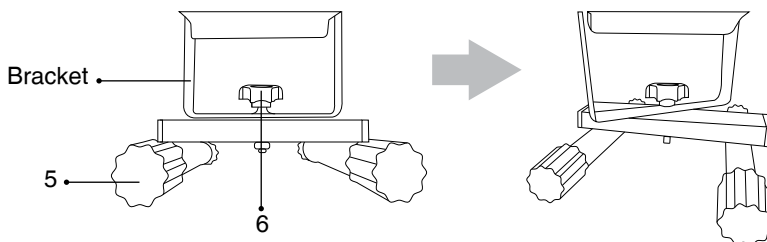

- 1- Place the stand (5) on a flat surface.
- 2- Use the locking knob (6) to secure the bracket on the top of the stand as shown in Fig.2.
- 3- Turn the bracket to a suitable direction and tighten the locking knob firmly.

■ ADJUSTING THE LIGHT DIRECTION

The work light head can be tilted vertically up to 30° down or 90° up. To adjust the light direction, adjust the work light head to the desired position then tighten the locking knob firmly.

■ ON/OFF SWITCH

The work light head is equipped with an ON/OFF switch located on the back side of the work light.

Press the switch once to turn the work light on and press the switch a second time to turn it off. Always turn the work light off before unplugging.

MAINTENANCE

Your work light requires very little care and maintenance. Simply clean the lens regularly with a non-abrasive cleaner.

Use the similar care for the stand.

WARNING:

Always make sure the work light is unplugged and complete cool before attempting to clean it.

WARNING:

If the supply cord of this light is damaged, it must be replaced only by a qualified service technician.

- ۱- پایه (۵) را روی یک سطح مسطح قرار دهید.
- ۲- با استفاده از دستگیره قفل کردن (۶)، براکت را در بالای پایه مطابق شکل ۲ نشان داده شده است، محکم کنید.
- ۳- براکت رو به سمت مناسبی برگردانید و دستگیره قفل رو محکم کنید.

■ تنظیم جهت نور

سر نورافکن می تواند به طور عمودی تا ۳۰ درجه به سمت پایین یا ۹۰ درجه به سمت بالا تنظیم نمود.

برای تنظیم جهت نور، سر نورافکن را به موقعیت مورد نظر تنظیم کنید و سپس دکمه قفل را محکم کنید.

■ سوئیچ روشن/خاموش

نورافکن مجهز به یک سوئیچ روشن/خاموش است که در پشت آن قرار دارد.

برای روشن کردن چراغ یک بار روی کلید فشار دهید و برای خاموش کردن آن یک بار دیگر روی کلید فشار دهید. همیشه قبل از جدا نودن دوشاخه، چراغ رو خاموش نمایید.

■ تعمیر و نگهداری

نورافکن دارای مراقبت و نگهداری خاصی نمی باشد و کاربر بایستی در صورت کثیفی لنز آنرا تمیز نماید.

⚠ هشدار:

همیشه قبل از تمیز کردن چراغ مطمئن شوید که خاموش شده و کاملاً خنک است.

خدمات پس از فروش

⚠ توجه!

توجه داشته باشید که هیچ کدام از اجزای داخلی این ابزار احتیاج به تعمیرات اضافه یا دستکاری جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه دستکاری یا ارائه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه ایراد، سریعاً با نزدیک ترین مرکز سرویس مجاز تماس حاصل نمایید تا از خدمات سریع و دقیق **رونیکس سرویس** استفاده نمایید.

برای اطلاع از عاملیت های مجاز **رونیکس سرویس** با تلفن ۰۲۱-۶۴۹۷ تماس حاصل نمائید.

- همیشه قبل از استفاده از نورافکن، قسمت های آسیب دیده یا فرسوده را بررسی کنید. قطعات شکسته بر عملکرد نورافکن تأثیر می گذارد. قطعات آسیب دیده یا فرسوده را بلافاصله جایگزین یا تعمیر کنید. اگر نیاز به تعمیر دارید، با یک برقکار حرفه ای مشورت کنید.
- برای تمیز کردن این محصول از کارواش استفاده نکنید.
- ساختار نورافکن را به هیچ وجه تغییر ندهید. اصلاحات غیرمجاز ممکن است عملکرد و یا ایمنی را مختل کند و می تواند بر عمر محصول تأثیر بگذارد. نورافکن برای برای کاربری روشنایی طراحی شده است.
- نورافکن را در مکانی امن و دور از دسترس کودکان نگه دارید. قبل از انبارش و قبل از استفاده مجدد آن را برای وضعیت کار مناسب بررسی کنید.

⚠ هشدار ایمنی برای نورافکن


این تجهیز اسباب بازی نیست؛ کودکان نباید اجازه استفاده از آن را داشته باشند و در صورت خرابی آن با یک برقکار حرفه ای مشورت نمایید.
سعی نکنید صفحه روشنایی را تعویض یا عوض کنید! اگر شیشه حفاظتی ترک خورده یا شکسته باشد، باید قبل از استفاده مجدد از نورافکن جایگزین شود.

توضیح علائم


مطابق با استانداردهای ایمنی مربوطه	CE
برای کاهش خطر آسیب، کاربر باید دستورالعمل استفاده را بخواند.	
در صورت خرابی محصول آنرا در زباله های خانگی دور نریزید.	

نحوه کاربری

مطابق تصویر زیر پایه را متصل نمایید.

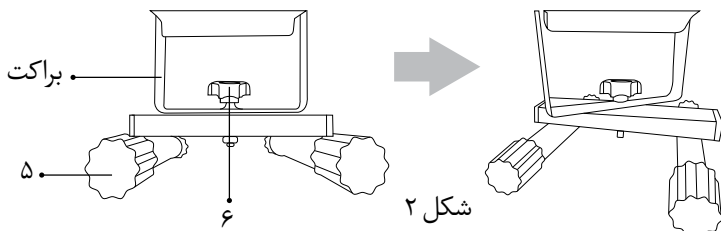

اجزاء و قطعات

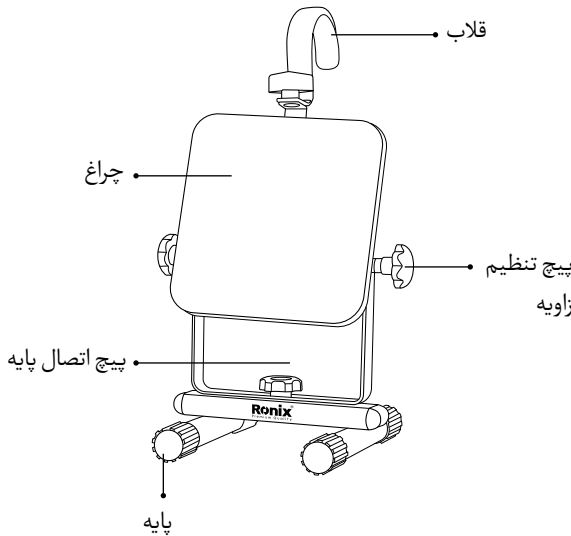

■ دستورالعمل های مهم ایمنی

قبل از استفاده از این تجهیز، تمام هشدارها، احتیاط ها و دستورالعمل های عملیاتی را بصورت کامل مطالعه نمایید. عدم پیروی از تمام دستورالعمل های ذکر شده در زیر ممکن است منجر به شوک الکتریکی، آتش سوزی و / یا آسیب جدی کاربر شود.

⚠ احتیاط:

خطر شوک الکتریکی کاربر در صورت استفاده از کابل سیار نزدیک آب یا جایی که ممکن است آب جمع شود وجود دارد لذا در زمان استفاده حداقل ۵ متر از استخرها فاصله داشته باشید. نورافکن را خشک نگه دارید و فقط از سیم سیار مجهز به سیم ارت در فضای باز استفاده کنید.

⚠ هشدار:

برای کاهش خطر آتش سوزی، شوک الکتریکی یا آسیب شخصی تمامی دفترچه راهنما به دقت مطالعه نمایید.

در صورت استفاده از نورافکن در محل مرطوب از حفاظت داخلی GFCI می توانند برای ایمنی استفاده شوند.

- فقط با یک کابل سیار استاندارد برای استفاده در فضای باز استفاده کنید.
- برای جلوگیری از آسیب چشم به طور مستقیم به لامپ های روشن نگاه نکنید.
- همیشه نورافکن را از هر سطح یا ماده قابل اشتعال دور نگه دارید.

مشخصات فنی


RH-4216	مدل
۳۲ وات	حداکثر توان
۲۲۰-۲۴۰ ولت	ولتاژ
۵۰-۶۰ هرتز	فرکانس
SMD2835	نوع روشنائی
۱۰۰٪- خاموش	حالت نورپردازی
سفید	رنگ نور تابشی
۱۲۰ درجه	زاویه تابش نور
PC+AL+Q197	جنس بدنه
۳۰۰۰ لومن	شدت نور
۴۰ متر	محدوده تابش نور
۶۵۰۰ کلوین	دمای نور
۱۶x۱۴/۵x۳۰ سانتی متر	ابعاد
۰,۹۵ کیلوگرم	وزن

رونیکس®

آخرین ابزاری که می‌خرید!

نورافکن LED برقی ۳۲ وات

RH-4216

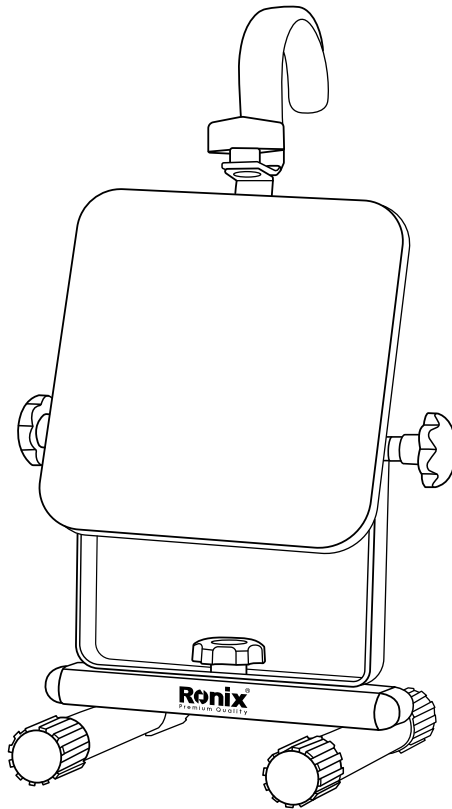

www.ronix.ir