

Ronix[®]

Premium Quality

SUBMERSIBLE PUMP 2HP RH-4033




www.ronix.ir



TECHNICAL SPECIFICATION

Model	RH-4033
Power	2hp
Voltage	220-240V
Frequency	50-60Hz
Min.flow	2m ³ /h
Max. Flow	9.2m ³ /h
Min.Head	0.5m
Max. Head	48m
Outlet Port Diameter	2"
Speed	2850RPM
Max. Liquid Temperature	0-35°C
Max. Ambient Temperature	0-40°C
Working Pressure	0-4.8BAR
Solid Passage Diameter	4mm
Max Immersion Depth	5m
Max Dry Running Time	10 seconds
Protection Level	IP68
Insulation Class	B
Pump Housing Material	Cast Iron
Motor Housing Material	S/S 201
Mechanical Seal Material	Sic-Sic/Ceramic-Graphite
Motor Protection	With
Coil Winding Material	Copper
Impeller Material	PPO
Shaft Material	316+45
Weight	23Kg

PARTS LIST

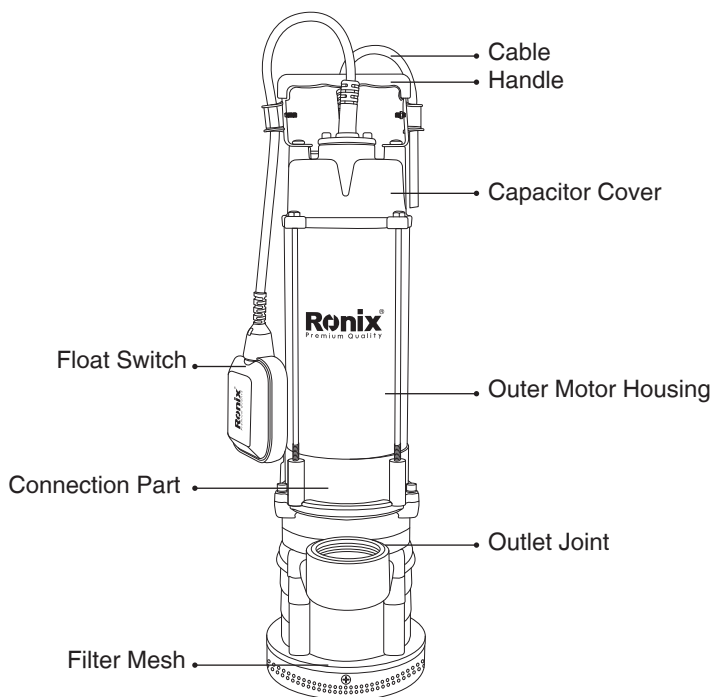

SAFETY PRECAUTIONS

This symbol ⚡ ⚠ together with one of the following words “Danger” or “Warning” indicates the risk level deriving from failure to observe the prescribed safety precautions:

⚡ **DANGER RISK ELECTRIC SHOCK**

Warns that failure to observe the precautions involves a risk of electric shock.

⚠ **DANGER!**

Warns that failure to observe the precautions involves a risk of damage to persons and/or things.

! WARNING!

Warns that failure to observe the precautions involves the risk of damaging the pump and/or the plant.

■ GENERAL INFORMATION

The purpose of these instructions is to ensure correct installation of the pump, thus ensuring the best possible hydraulic and electrical performance of the unit.


DRAIN series have been designed for the drainage of infiltration water, empty water tanks or swimming pools. DRAINEX series are used for the drainage of sewage water with particles in suspension, septic tanks, etc. the maximum water temperature is 35°C. Passage of particles up to 35mm. All pumps have been manufactured in top quality material, submitted to strict hydraulic and electric controls.

For correct installation, follow the directions in the given electrical schematic chart and the operating and maintenance instructions. Failure to do this could result in motor over-loading and other material of bodily damage for which we decline all responsibility.

Connect the plug of the control box to the supply, if there is a suitable water level the motor will start immediately. If the motor turns but no water is drawn, consult the "Possible faults, causes and solutions" list at the end of this manual. For their phase pumps, check if the direction of rotation corresponds to that of the arrow located at the suction filter.

THE PUMP SHOULD NEVER BE OPERATED DRY.


NEVER MODIFY THE FLOAT SWITCH POSITION, WHICH IS ADJUSTED BY THE MANUFACTURER.

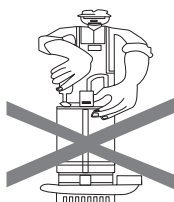


INSTALLATION

! The pump must always be totally submerged which will provide it with the necessary cooling. If there is a lot of dirt at the bottom of the water tank, and you are using a DRAIN pump, it is important to install the pump at least 5 cm. away from the bottom to avoid dirt blocking the wet end.

Ensure there is enough space for the free operation of the float switch.

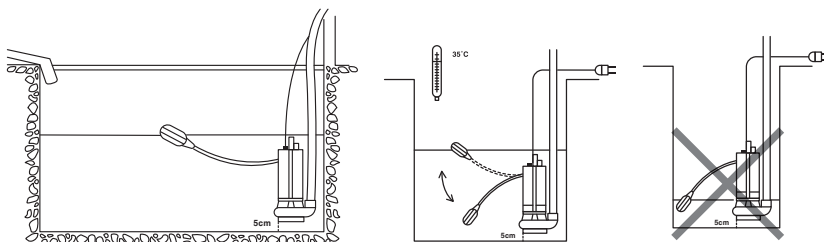

Never suspend the pump by its electric cord, if it is necessary that pump does not touch to the bottom, suspend it by a plastic cable fixed to the transport handle.

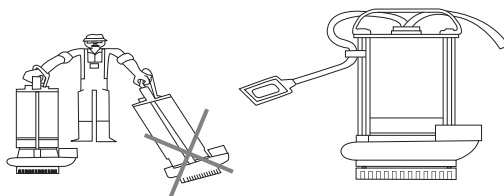


■ ASSEMBLY OF DISCHARGE PIPE

If the pipework needs to be long with numerous bends, it is recommended to install a pipe with a larger diameter than the discharge outlet to reduce the friction loss as much as possible.

Install a check valve to the outlet of the pump and you will prevent pipe from emptying each time pump stops. Avoid twisted or curved routing of the pipework and ensure correct connection at outlet. In both cases flow at outlet will be reduced if the connection is wrong.

ELECTRIC CONNECTION

⚠ The pump installation should incorporate the following: Switch with multiple contact separation, minimum 3mm. Residual current circuit breaker 30 mA (RCCB). Pumps assembled with a starting control box are supplied ready for operation. On three phase pumps, protection should be provided by the use.

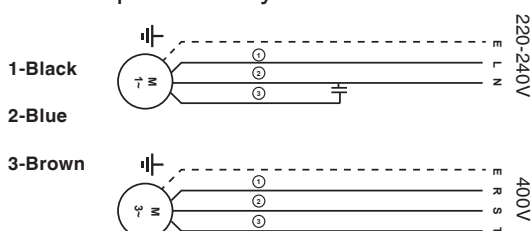

STARTING

⚠ Ensure that the voltage and frequency are the same as those shown on the motor specification plate.

MAINTENANCE

⚠ Our DRAIN and DRAINEX pumps require no specific maintenance but we suggest the following: In colder seasons, when temperatures fall below 0, to empty the discharge pipe. If the pump is not to be used for an extended period of time, it should be taken out from the installation and stored in a dry and well-ventilated place.

⚠ ATTENTION:

The replacement of the electrical supply cable requires the use of special tools, which can only be carried out by the manufacturer and/or our Official Service Engineer.

■ Possible faults, causes and solutions


1- Pump does not start.

- 2- Pump runs but there is no flow.
- 3- Pump Stops automatically.
- 4- Pump does not deliver rated capacity

SOLUTIONS	CAUSES	1	2	3	4
Replace fuses or switch RCCB (30 mA)	Lack of electricity	x			
Switch thermal protector or check that voltage is correct	Improper thermal protection	x		x	
Wait for water level to be back to adequate level	Float switch disconnected	x			
Call Service Engineer	Wet end blocked	x		x	
Check the free operation of the float switch	Blocked float switch	x			
Connect it and fix the discharge pipe correctly	Disconnected discharge pipe		x		
Move the pump laterally to empty the air	Air trapped at the pump body		x		
Assemble the valve correctly	Check valve assembled wall/round		x		
Submerge the pump or wait to have the suitable level	Pump partially covered of water		x		
Clean the suction filter	Inlet filter obstructed		x		x
Check the geometric head and loss of head	Total manometric head higher than expected				x
Contact a service Engineer	Impeller worn				x
Replace it by a new one	Deteriorated discharge pipe				x

برای اطلاع از عاملیت های مجاز رونیक्स سرویس با تلفن ۰۲۱-۶۴۹۷ تماس حاصل نمائید.

مشکلات احتمالی	راه حل	۱	۲	۳	۴
قطعی برق پمپ	کلید و فیوز را بررسی نمایید	X			
عملکرد ناقص سوئیچ حرارتی	سوئیچ حرارتی و ولتاژ را بررسی نمایید	X		X	
سوئیچ شناور قطع می باشد	اجازه دهید سطح آب مخزن بالا بیاید	X			
ورودی پمپ دچار گرفتگی می باشد	با نمایندگی تماس حاصل فرمایید	X		X	
شناور پمپ مشکل دارد	حرکت شناور را بررسی نمایید	X			
لوله خروجی اتصال مناسب ندارد	اتصال لوله خروجی را بررسی و مجدد آنرا متصل نمایید		X		
پمپ هوا گرفته است	پمپ را تکان دهید تا هوا خارج گردد		X		
شیر یکطرفه مشکل دارد	از نصب صحیح شیر یکطرفه اطمینان حاصل فرمایید		X		
پمپ بصورت کامل در داخل آب غوطه ورنمی باشد	از قرارگیری کامل پمپ داخل آب اطمینان حاصل فرمایید		X		
فیلتر ورودی گرفتگی دارد	فیلتر را بررسی و گرفتگی را رفع نمایید		X		X
هد پمپ بیش از حد مجاز است	هد پمپ را کاهش دهید			X	
ایمپلر پمپ فرسوده می باشد	با نمایندگی تماس حاصل فرمایید				X
لوله خروجی مشکل دارد	لوله خروجی بایستی تعویض گردد				X

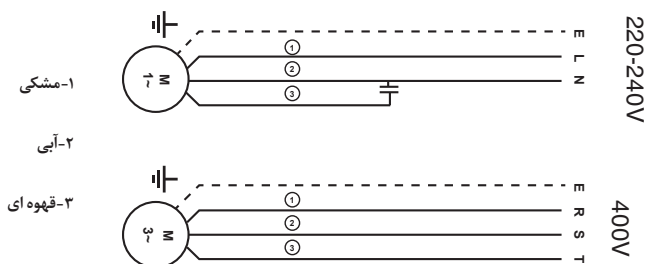

■ روشن نمودن پمپ

ولتاژ و فرکانس شبکه شهری بایستی مطابق جدول مشخصات پمپ باشد. دوشاخه پمپ را به پریز برق متصل نمایید.

■ تعمیر و نگهداری

پمپ های کف کش و لجن کش در صورت استفاده صحیح نیاز به سرویس دوره ای ندارند و همچنین به منظور افزایش بازدهی پمپ به نکات زیر توجه نمایید:
در فصول سرد سال در صورتی که دمای هوا زیر صفر باشد حتماً آب محفظه پمپ جهت جلوگیری از یخ زدن تخلیه گردد. در صورت عدم استفاده از پمپ آنرا در محیط مسقف نگهداری نمایید.
توجه: در صورت خراب شدن پمپ آنرا جهت تعمیر به نمایندگی های مجاز رونیکس تحویل دهید.


■ عیب یابی

- ۱-موتور روشن نمی شود.
- ۲-موتور روشن ولی جریان آب ایجاد نمی شود.
- ۳-پمپ بصورت اتوماتیک خاموش میگردد.
- ۴-پمپ توانایی رسیدن به ظرفیت کارایی نامبرده را ندارد.


خدمات پس از فروش

⚠ توجه!

توجه داشته باشید که هیچ کدام از اجزای داخلی این ابزار احتیاج به تعمیرات اضافه یا دستکاری جهت بهینه نمودن عملکرد ندارند. بنابراین از هرگونه دستکاری یا ارائه به مراکز تعمیرات غیر مجاز اجتناب نمایید و در صورت بروز هرگونه ایراد، سریعاً با نزدیک ترین مرکز سرویس مجاز تماس حاصل نمایید تا از خدمات سریع و دقیق **رونیکس سرویس** استفاده نمایید.

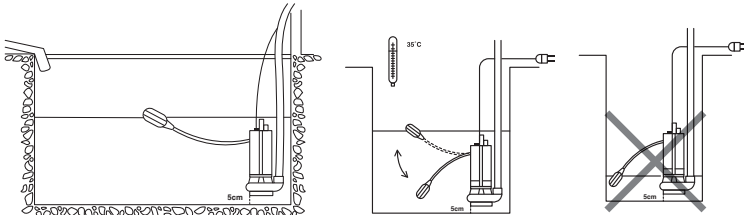

در زمان انتقال پمپ به داخل کف مخزن و استخر هرگز از کابل برق آن استفاده ننمایید.

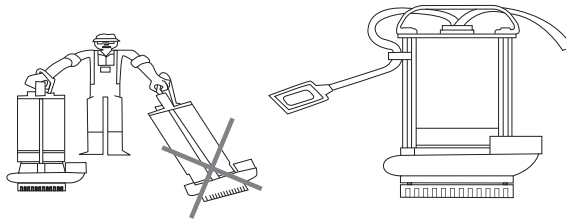

■ مونتاژ و نصب لوله تخلیه (دهش)

در صورتی که مسیر لوله کشی بیش از اندازه طویل و دارای اتصالات متعدد باشد بایستی از لوله سایز بزرگتر جهت جلوگیری از افت فشار استفاده گردد. جهت جلوگیری از تخلیه سیال داخل لوله خروجی در زمان خاموش بودن پمپ از شیریکترفه استفاده نمایید. پیچ یا گره خوردن لوله خروجی موجب افزایش فشار و ترکیدن لوله میگردد لذا کاربر بایستی در زمان استفاده از پمپ از پیچ یا گره خوردن لوله خروجی جلوگیری نماید.

دستورالعمل اتصالات الکتریکی

⚡ جهت نصب و راه اندازی پمپ از کلید روشن و خاموش مجهز به فیوز استفاده نمایید. قسمت الکتریکی پمپ توسط سازنده نصب و آماده استفاده می باشد. در پمپ های سه فاز استفاده از محافظ الکتریکی بعهدہ کاربر می باشد.

موارد ایمنی می باشد.


■ اطلاعات عمومی

هدف اصلی دفترچه راهنما آگاه نمودن کاربر در مورد نصب و راه اندازی صحیح و جلوگیری از آسیب دیدن کاربر و افزایش بازدهی پمپ می باشد. پمپ های کف کش به جهت تخلیه آب دارای املاح، تخلیه تانکرهای آب یا استخرها طراحی گردیده است. پمپ های لجن کش به جهت تخلیه آب حاوی لجن و دارای ذرات طراحی گردیده است. حداکثر دمای آب مجاز ۳۵ درجه سانتی گراد و حداکثر سایز ذرات ۳۵ میلیمتر می باشد.

جهت نصب و راه انداز صحیح پمپ کاربر بایستی به تمامی نکات داخل دفترچه از جمله شمایک الکتریکال، تعمیر و نگهداری توجه نمایید. در صورت عدم مطالعه دفترچه راهنما توسط کاربر موجب آسیب دیدن پمپ میگردد.

بعد از نصب پمپ در صورت اتصال پمپ به برق، در صورتی که آب کافی وجود داشته باشد عملیات پمپاژ صورت خواهد گرفت ولی در صورتی که پمپ مشکل داشت جهت رفع مشکل به جدول عیب یابی مراجعه نمایید.


در پمپ های سه فاز جهت چرخش بررسی گردد و همچنین هرگز پمپ بدون وجود سیال روشن ننمایید زیرا موجب سوختن پمپ میگردد. از تغییر تنظیمات شناور پمپ جدا خودداری فرمایید.

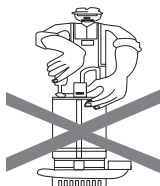

نصب و راه اندازی

! پمپ بایستی به منظور خنک کاری صحیح بصورت کامل داخل سیال غوطه ور گردد. در صورت استفاده از پمپ کف کش و بالا بودن سطح آلودگی کف مخزن یا استخر بایستی ورودی پمپ حداقل ۵ سانتیمتر بالاتر، به منظور جلوگیری از گرفتن ورودی قرار بگیرد. حتما فضای محل قرارگیری پمپ و شناور از لحاظ عملکرد صحیح، بررسی گردد

اجزا و قطعات

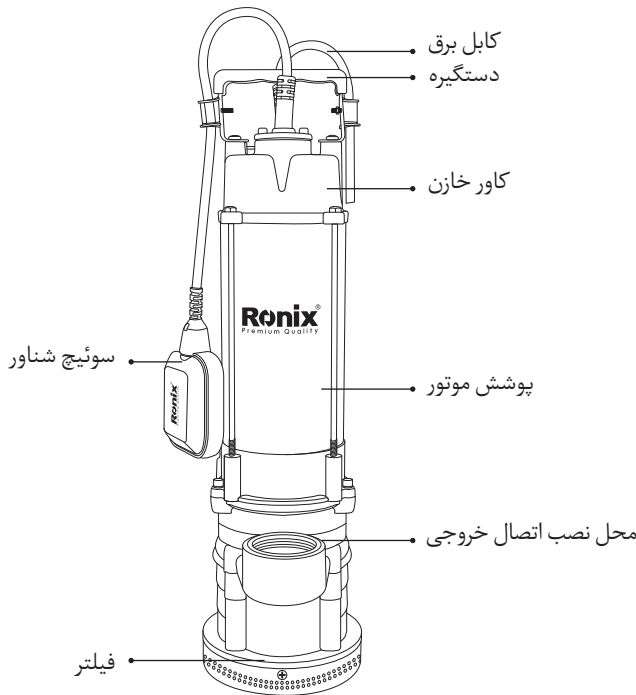

■ نکات ایمنی

علامت های زیر به همراه کلمات خطر و هشدار نمایانگر سطح خطر برای کاربر می باشد لذا توجه به برجسب های ایمنی روی دستگاه الزامی می باشد.

⚡ خطر شوک الکتریکی

علامت نشانگر خطر شوک الکتریکی برای کاربر می باشد.

⚠ خطر

عدم رعایت نکات ایمنی موجب آسیب دیدن کاربر یا محل کار میگردد.

⚠ هشدار

این علامت نشانگر احتمال آسیب دیدن پمپ و سطح نشیمنگاه آن در صورت رعایت نکردن

مشخصات فنی

RH-4033	مدل
۱۲ اسب بخار	توان
۲۲۰-۲۴۰ ولت	ولتاژ
۵۰-۶۰ هرتز	فرکانس
۲ متر مکعب بر ساعت	حداقل دبی خروجی
۹٫۲ متر مکعب بر ساعت	حداکثر دبی خروجی
۰٫۵ متر	حداقل هد (ارتفاع پمپاژ)
۴۸ متر	حداکثر هد (ارتفاع پمپاژ)
۲ اینچ	قطر دهانه خروجی
۲۸۵۰ دور بر دقیقه	سرعت
۳۵-۰ درجه سانتی گراد	حداکثر دمای سیال
۴۵-۰ درجه سانتی گراد	حداکثر دمای محیطی
۴٫۸-۰ بار	فشار کاری
۴ میلی متر	حداکثر قطر ذرات جامد در سیال
۵ متر	حداکثر عمق غوطه وری
۱۰ ثانیه	حداکثر زمان کارکرد بدون آب
IP68	درجه بندی حفاظت بدنه موتور
B	کلاس حرارتی موتور
چدن	جنس پوسته پمپ
201 S/S	جنس پوسته موتور
SIC-SIC/سرامیک-گرافیت	جنس سیل مکانیکی
WITH	محافظت موتور
مس	جنس سیم پیچ موتور
PPO	جنس پروانه
۳۱۶+۴۵	جنس شفت
۲۳ کیلوگرم	وزن



رونیکس®

آخرین ابزاری که می‌خرید!

پمپ کف کش استیل ۴۸ متری ۲ اسب

RH-4033



www.ronix.ir